



# OPEN A-FRAME, Double-Sided SETUP

\*Please wear work gloves during installation


## Parts

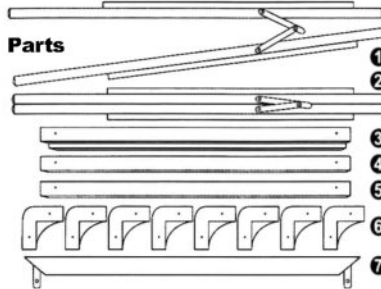


1. Left-side Leg with snap-profile & hinge
  2. Right-side
  3. Top Connector rods (qty:2)
  4. & 5. Bottom (qty:2)
  6. Plastic corner connectors (qty:8)
  7. Snap-profiles, top and bottom (qty:2)
- Packet of screws, bolts and metal Corner Inserts included

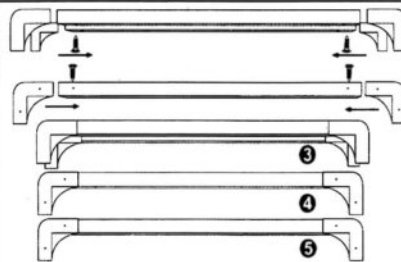

Slide the Plastic corner connectors onto the Connector rods.  
Align the holes and secure with the pointed screws.

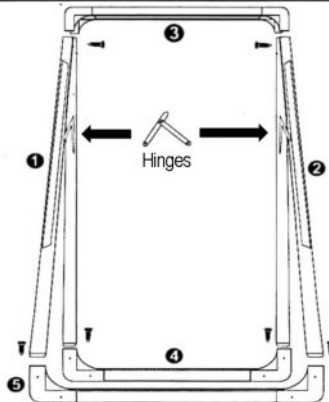

Open the hinged Left and Right-side Legs(#1 & #2) slightly.  
Attach the Top connector rods (#3). Secure with screws.  
Then attach the Bottom Connector rods (#4 & #5)

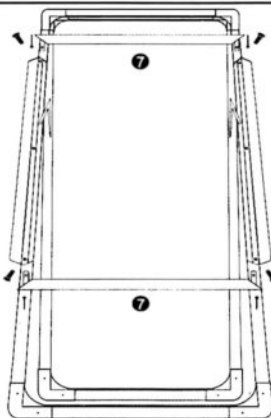

Open the Left and Right Snap-profiles. Slide the metal  
Corner Inserts into the Top & Bottom Snap-profiles and  
secure with bolts. Slide Top & Bottom Snap-profiles into  
the Left & Right Snap-profiles and secure with bolts.